


# Operating Manual For Easy Clicker

UR2-211

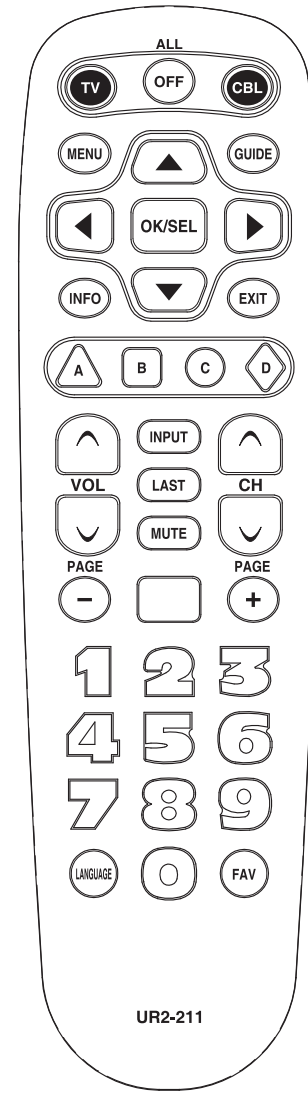


## 1 Introduction

This remote control is designed to operate most Digital, Analog Cable boxes, IPTV set top boxes and TVs.

## 2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover from the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

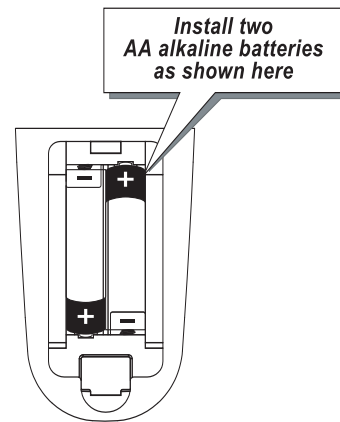

## 4 Programming the Remote Control

*\*Note : In this section, when you are instructed to press a [DEVICE] button, that means you should press either the CBL or TV button, depending on which device you are programming the remote to operate.*

### A. Quick Set-Up Method

(Refer to the Section B Quick Set-up table of codes)

- STEP1** Turn on the component you want to program. To program your TV, turn on the TV.

## 3 Button Functions

- TV, CBL** Used to select the Device you want to operate and signals remote control activity.
- ALL OFF** Designed to send Power On/Off commands for up to two Components with one buttons press.
- GUIDE** Displays the program guide listings.  
▲, ▶, ▼, ◀ Highlight an item from th on-screen choices.
- EXIT** Exit from current screen.
- A, B, C, D** Make direct selections from on-screen menus.
- INPUT** Selects the video source from available video components.
- CH ▲/▼** Selects the next higher or lower channel.
- MUTE** Silences the audio. Press to activate. Press this key again to restore sound to previous level.
- Macro Button** For future use
- NUMBER Pad** Enter numbers to tune to channels. Also make numeric entries on on-screen menus. You can also use the Ch▲/▼and the guide as alternate ways to tune to channels.
- FAV** Displays favorite channel.
- SETTINGS / MENU** Displays the settings Menu.
- OK/SEL** Selects highlighted screen options.
- INFO** Displays information about the program currently playing or highlighted in the program guide.
- LAST** Accesses the previously tuned channel.
- VOL ▲/▼** Raises or lowers the sound level.
- PAGE ▲/▼** Accesses pages above or below the information currently displayed.
- LANGUAGE** Change the language.

- STEP2** Press and hold the [DEVICE] key for 5 seconds until the Device LED will blink once and stays on. Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The Device LED will blink twice to confirm that the code is stored.

- STEP3** Point the remote control at the component.
- STEP4** Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components (CBL, TV).

### B. Quick Set-up Code Tables

CBL	
Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV	
Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

### C. Manual Programming

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

- STEP1** Turn on the equipment that you want the remote control to operate (Cable Box or TV).
- STEP2** Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.
- STEP3** Point the remote control toward the equipment and enter the three-digit code number assigned to your

brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.

*\*Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above using the next three digit code number from the brand list.*

- STEP4** Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

### D. Auto Search Method

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

- STEP1** Turn on the equipment that you want the remote control to operate (Cable Box or TV).
- STEP2** Press the [DEVICE] button and the [OK/SEL] button simultaneously for 3 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 30 seconds. The next step must be entered while the LED is on.
- STEP3** Press the [CH ▲] or [CH ▼] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH ▲] or [CH ▼] button as soon as the equipment turns off.

*\*Note: You can verify that you have selected the correct code by pressing the [POWER] button. The equipment should turn back on. Then try all of the functions on the remote control (i.e. volume, mute, etc.) to ensure you have the correct code. If any of the functions do not operate as they should, repeat the instructions from STEP 3 above to continue the Auto Search Method.*

- STEP4** Press the same [DEVICE] button to store the code.

